


(TYP)

PROVIDE ACCESS CARD
READER AND FASTEN TO
FACEPLATE, CONCEAL ALL
WIRING

SECTION B

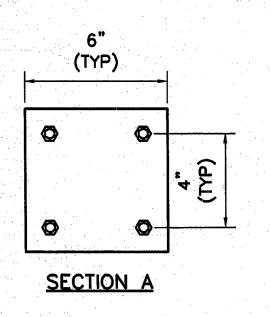

NO.1 GENERAL NOTES:

1. MOUNTING HARDWARE AND BOLTS SHALL
BE STAINLESS STEEL.

NOT TO SCALE

MOUNTING POST DETAIL

NO.2 GENERAL NOTES:

1. MOUNTING HARDWARE AND BOLTS SHALL
BE STAINLESS STEEL.

NO.3 GENERAL NOTES:


1. MOUNTING HARDWARE AND BOLTS SHALL BE STAINLESS STEEL.

MOUNTING POST
FACEPLATE DETAIL
NOT TO SCALE

MOUNTING POST


BASEPLATE DETAIL

NOT TO SCALE

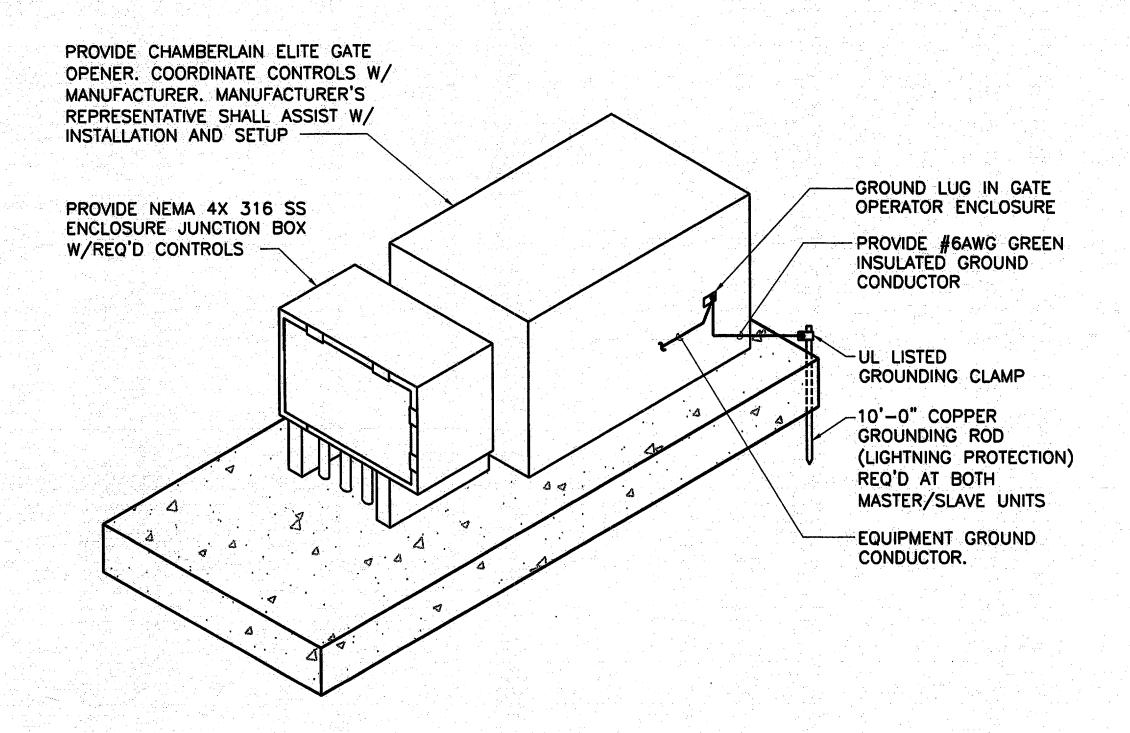

SLIDE GATE OPERATOR

NOT TO SCALE

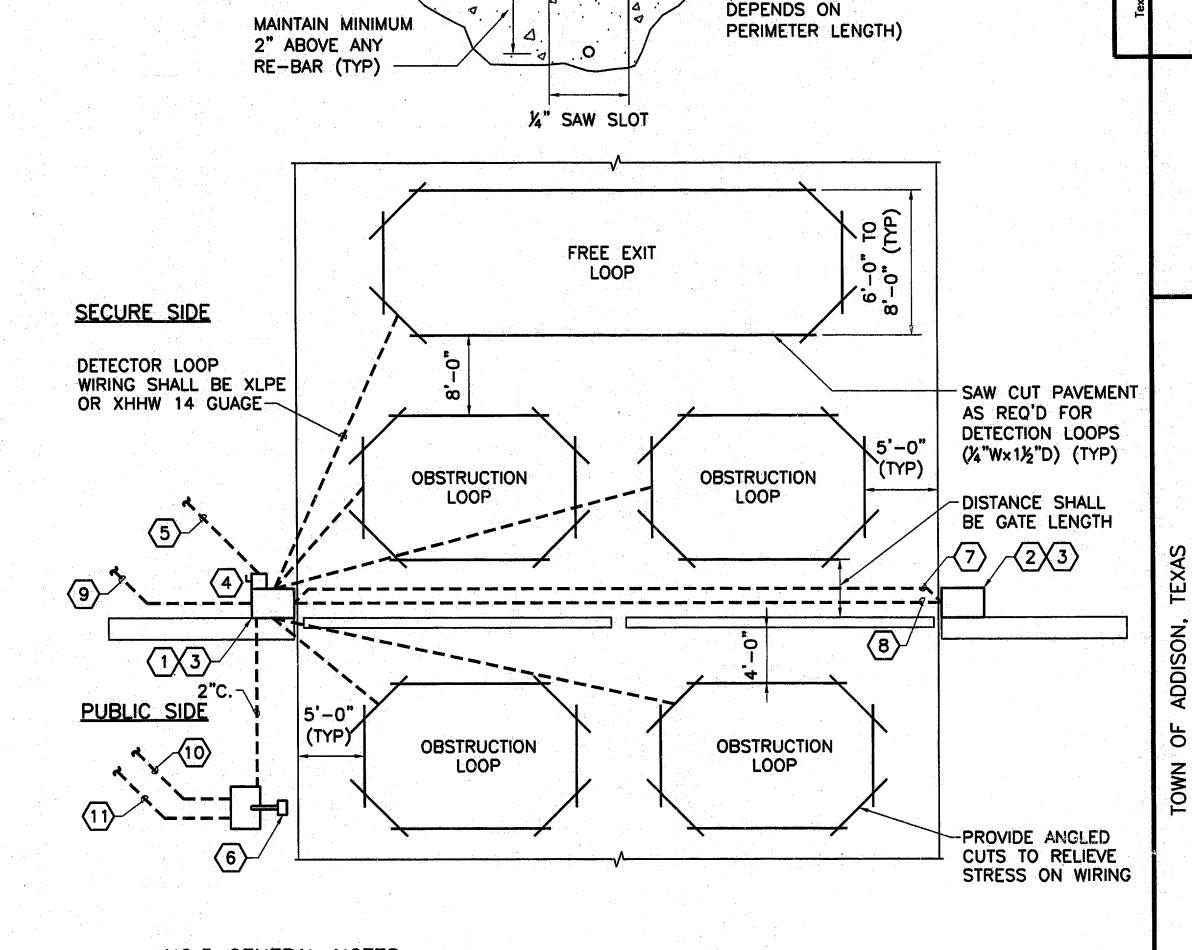

PROVIDE

SEALER

LOOP WIRE

(NUMBER OF WIRES

NON-HARDENING

NO.5 GENERAL NOTES:

1. DESIGN IS BASED ON A SWING GATE OPERATOR. THE SLAVE GATE OPERATOR OPERATES OFF ELECTRIC CONTROL EXTENDED FROM THE MASTER GATE OPERATOR AND THEREFORE THE POWER FEED (120V, 10, 60HZ) IS REQUIRED ONLY AT THE MASTER GATE CONTROLLER.

2. PROVIDE AND INSTALL CONTROL WIRING AND POWER AND CONTROL CONDUCTORS FROM MASTER GATE CONTROLLER TO SLAVE GATE OPERATOR IN ACCORDANCE WITH MANUFACTURER'S RECOMMENDATIONS.

3. REFER TO CIVIL PLANS FOR SIZE/LOCATION OF GATE CONTROLLER, BOLLARDS, GATES, FENCES, ETC.

4. THIS DETAIL IS SCHEMATIC IN NATURE AND IS INTENDED TO ILLUSTRATE MAJOR COMPONENTS AND WORK NECESSARY FOR SUCCESSFUL OPERATION OF THE GATE CONTROL SYSTEM. CONTRACTOR SHALL PROVIDE ALL LABOR AND MATERIALS REQUIRED FOR A COMPLETE AND OPERABLE SYSTEM.

5. POLARITIES MUST BE THE SAME ON THE DETECTOR LOOPS OR THE ELECTRIC FIELDS WILL INTERFERE WITH EACH OTHER.

2. GATE OPERATOR (MASTER).

- 3. PROVIDE CONCRETE BASE FOR GATE OPERATOR. LOCATE PER MANUFACTURER'S INSTALLATION INSTRUCTIONS.
- 4. POWER FEED FOR GATE CONTROLLER. PROVIDE 30A/1P/NF DISCONNECT SWITCH IN NEMA 4X STAINLESS STEEL ENCLOSURE.
- 5. TYPICAL POWER FEED FOR GATE CONTROLLER.


6. PROVIDE ELECTRONIC GATE CONTROL CARD READER.

- . PROVIDE MINIMUM 2" CONDUIT BETWEEN MASTER/SLAVE OPERATOR FOR POWER.
- 8. PROVIDE 1" CONDUIT WITH CONTROL WIRING (3PR. #18 SHLD.) AND MAKE ALL TERMINATIONS. PROVIDE ADDITIONAL 1" SPARE CONDUIT BETWEEN OPERATORS.
- 9. PROVIDE 1" CONDUIT FROM MASTER GATE OPERATOR TO SECURITY CONTROL PANEL.

 10. PROVIDE 1" CONDUIT FROM MOUNTING POST TO LOCATION IN SECURITY CONTROL PANEL AS IDENTIFIED BY OWNER. PROVIDE COMMUNICATION CABLING IN CONDUIT PER MANUFACTURER'S RECOMMENDATIONS. MAKE ALL TERMINATIONS AS REQUIRED.

11. PROVIDE 120V POWER TO MOUNTING POST FOR CONTROL SYSTEM.



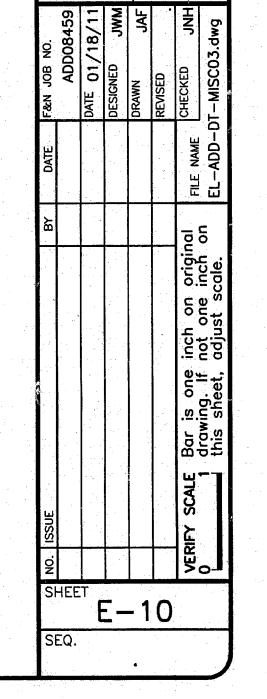

FREESE

ST

ليا

MG

JRVEYOR

S

Date: Jan 18, 2011 - 2:04pm User: ppm File: N:\elec\EL-ADD-DT-MISC03.dwg