


**TOPSOIL PLACEMENT PROCEDURE**

1. PRIOR TO CLOSING BASKET, PLACE A LAYER OF 3/4" GRAVEL ON TOP OF THE GABION WALL AND THE HORIZONTAL STEPS FILLING THE VOIDS BETWEEN THE GABION ROCKS.
2. SWEEP EXCESSIVE GRAVEL OFF THE GABIONS WITH A BROOM UNTIL FLUSH WITH, OR BELOW, THE TOP OF THE GABION.
3. PLACE A LAYER OF SOIL ON TOP OF THE GABION WALL AND STEPS.
4. WASH OR "JET" THE SOIL INTO THE GABIONS.
5. PLACE FINAL LAYER OF TOPSOIL ON THE GABIONS TO A DEPTH OF SIX INCHES.


**SECTION**

NOTE:  
DO NOT USE SHARP TOOLS WHEN SPREADING TOPSOIL ON GABIONS


**VEGETATED GABION WALL  
TOPSOIL PLACEMENT**

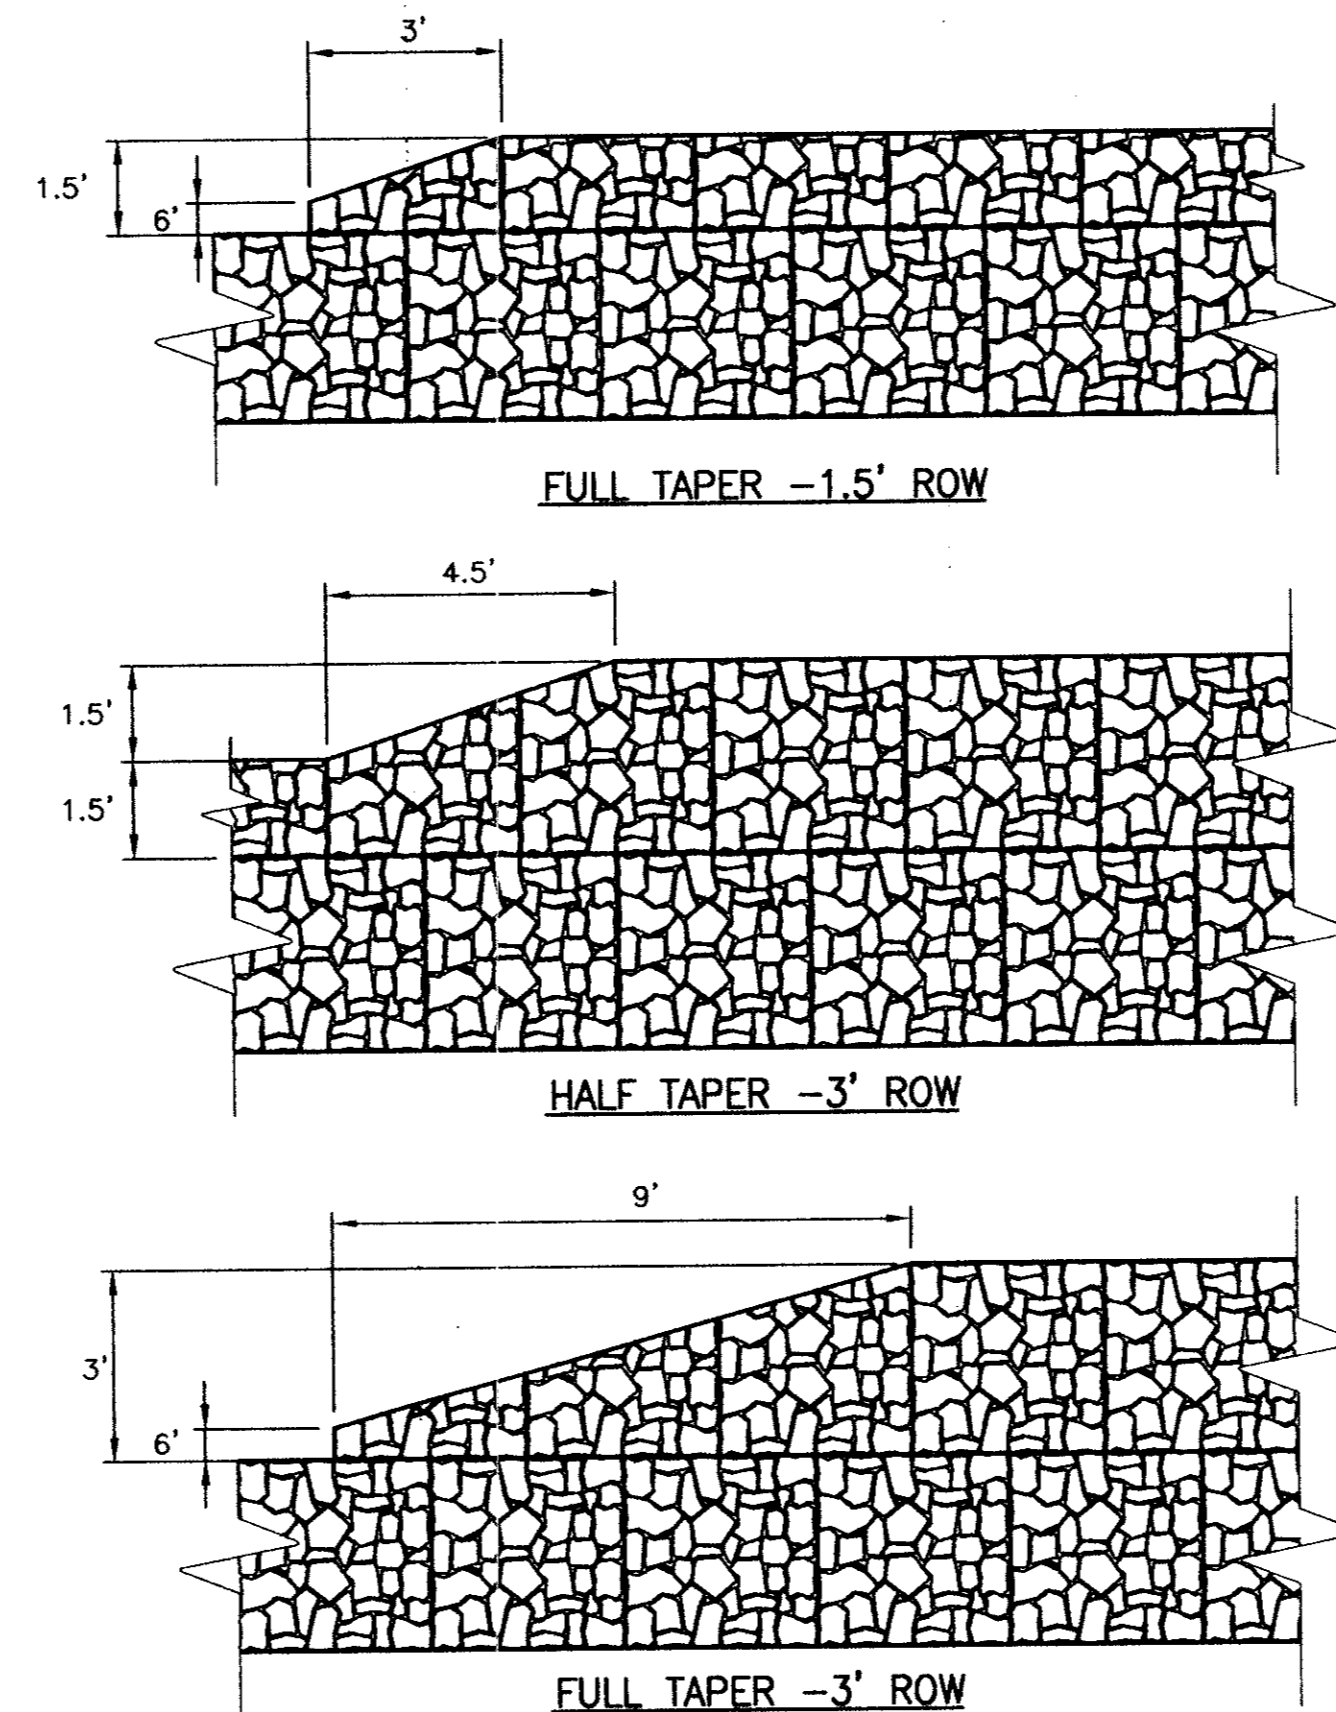

**TAPERED WALL HEIGHT TRANSITION**

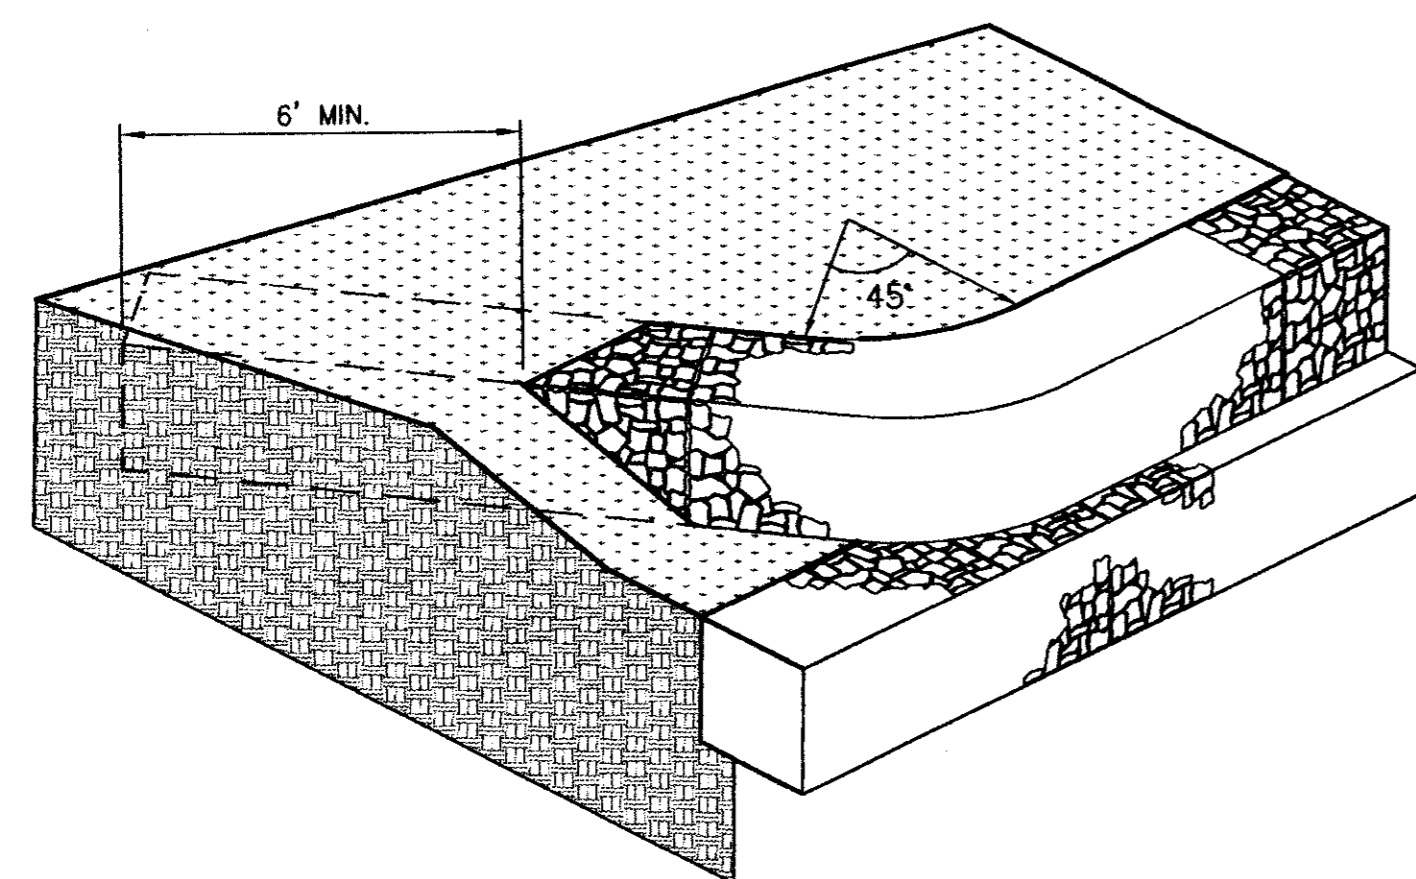

**RADIUSED HEIGHT TRANSITION**

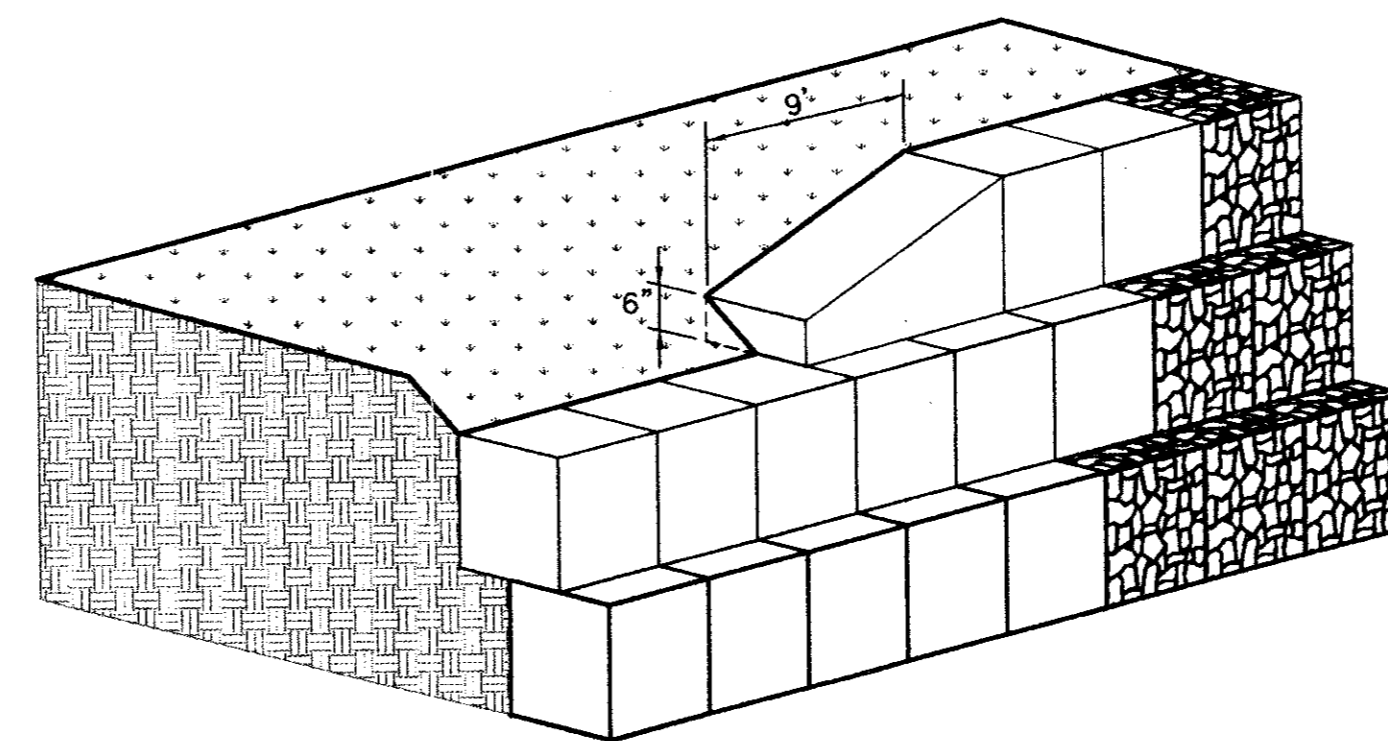


**STANDARD TAPER  
FOR WALL HEIGHTS TRANSITIONS**

These plans and related specifications were prepared for construction of this specific project only. Reuse of these documents is not permitted without written authorization of Shimek, Jacobs & Finklea, L.L.P.

**TOWN OF ADDISON, TEXAS**  
TOWNHALL STREAM BANK EROSION PROTECTION  
**MISCELLANEOUS DETAILS**

**SHIMEK, JACOBS & FINKLEA, L.L.P.**  
CONSULTING ENGINEERS  
Dallas, Texas

THESE DOCUMENTS ARE FOR  
BIDDING, CONSTRUCTION,  
AND PERMIT PURPOSES.  
*John W. Birkhoff*  
DATE: 10/31/97

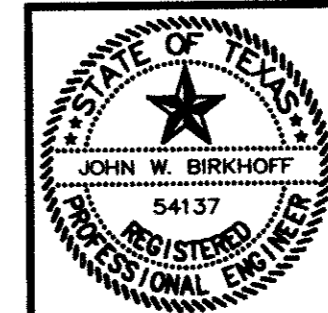

DESIGNED BY: M.H.	PROJECT: 97151	SHEET NO. 9
DRAWN BY: J.L.Y.	DATE: OCTOBER, 1997	OF 9 SHEETS